




Catheter Securement

Application of Grip-Lok Wide Adhesive for PICC& Midline Securement

Prepare the skin with ChloraPrep, using a back and forth criss cross motion for 30 seconds, and allow to dry thoroughly

1

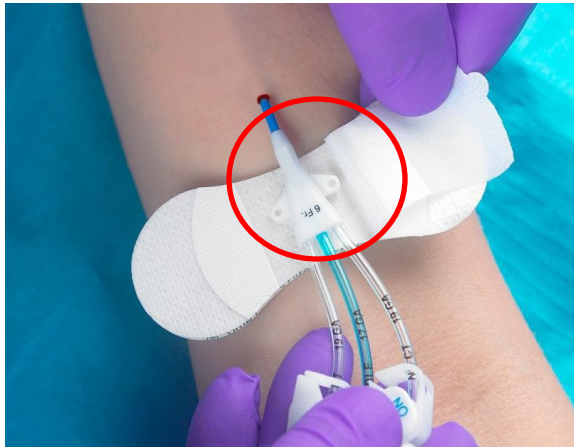

2



Open the top flap and remove the inside liner. Slide the Grip-Lok under the catheter. Ensure winglets of PICC line are positioned to top of adhesive section. This is very important.

Firmly secure PICC line by pinching around the winglets and along the length of the catheter once top flap is closed.

3



4



While holding the Grip-Lok and catheter in place with one hand, remove the bottom release liner from one side and adhere to skin.

Remove second bottom release liner and secure to skin. Gently press down around the edges and top surface of the Grip-Lok to ensure the adhesive connects well to the skin and to the PICC. Then cover with an IV3000 PICC dressing



Grip-Lok 3300MWA will secure a wide variety of catheter hub sizes and shapes.



Product Codes:
Grip-Lok NHS supply chain ELW 299
ChloraPrep 3ml MRB306
IV3000 PICC dressing ELW363